

user manual



BAMBOO

D700





D700

Contents

1 Introduction	3
1.1 Welcome	3
1.2 Notifications	4
1.3 Safety Instruction	4
1.4 Abbreviation/Terminology	5
2 Bamboo Tablet Introduction	6
2.1 Bamboo Accessories Introduction	6
2.2 Bamboo Operation and Preparation	6
2.3 Bamboo Status and Reminder	7
3 Quick Start Guide	8
3.1 Keys Function	8
3.2 Startup and Shutdown	8
3.3 Open and Close the Screen	9
3.4 Usage of Touch Screen	10
3.5 Main Interface	11
3.6 Visit Application Procedures	15
3.7 USB Connection	16
3.8 Words Input	17
3.9 Application Technique	18
4 Basic Setting	19
4.1 Wireless and Internet	19
4.2 Bluetooth	20
4.3 Display	21
4.4 Management	23
4.5 SD Card and Bamboo Storage	23
4.6 Date and Time	24
4.7 Language Setting	25
4.8 About Bamboo Tablet	25
4.9 Fixed-time Startup and Shutdown	26
4.10 Security Settings	27

5 Multi-Media	29
5.1 Music	29
5.2 Video	30
5.3 Photo Gallery	32
5.4 Camera	33
5.5 Connection of HDMI	34
5.6 FM Radio	34
5.7 Analog TV	36
6 Communication Function	39
6.1 Phone	39
6.2 Text Message	40
6.3 Contact List	41
7 Internet	42
7.1 Browser	42
7.2 Email	44
8 GPS Function	46
9 Other Application Procedures	48
9.1 Clock	48
9.2 Calculator	48
9.3 File Manager	49
9.4 Recorder	51
10 Installation of Procedures	52
10.1 Installation	52
10.2 Uninstall	52
10.3 Update Path	52
11 System Upgrade	53
11.1 Preparation for System Upgrade	53
11.2 Restore Factory Setting	53
11.3 System Upgrade	53
12 Trouble-Shooting	58
Appendix	59
Contact	60

1 Introduction

1.1 Welcome

Thank you for purchasing this exceptional product – the Bamboo D700 tablet.

Our story is a simple one, though unique.

Since 2010, we've worked hard to develop a tablet computer focused on the middle market, not as a luxury item but as a durable and long lasting product with features that can match (and exceed) any luxury brand at prices that appeal to the everyday individual backed by 12 months warranty.

We're very happy to say, "We've done it!" The Bamboo D700 is a high definition (HD) tablet with a dual-core processor, functioning on a dominant 1GHz frequency and based on Google's Android 4.0 operation system (upgradeable) and seamlessly put together to provide superior performance. We're so confident in the Bamboo's awesome operational power and features; we encourage you to challenge other tablet owners (irrespective of the brand) to a competition!

The Bamboo D700 is designed with various functions including dual-SIM to make voice calls and to browse the internet on 2G, 3G, or WIFI networks. It's a mobile internet device that provides real-time, on-demand access to content, the internet, computing and communication tools, and high-quality services.

It comes pre-loaded with special features unique to the Bamboo D700 such as a mobile terrestrial TV to keep you connected to your favourite tv channels even when you're on the move, a point-of-sale application for small businesses, a job/career tool to connect you to the job offers suited specially for you; as well as social sharing and a dual-facing (front and back) camera to store and share memories.

In essence, you are holding a device that will change your life!

1.1 Welcome continued

This manual systemically introduces the functions, use, techniques and necessary information to enjoy your Bamboo D700 tablet. Please read this manual carefully before operating your Bamboo D700 tablet.

Some of the contents in this manual may differ from your tablet depending on the software of the tablet. Actual color may vary.

Your tablet is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your tablet being shared.

1.2 Notifications

PREVENTIVE MAINTAINANCE

- Please always keep the Bamboo D700 tablet dry. To avoid corrosion, faults, the device short-circuiting and electric shocks, please do not expose the device, battery and charger to direct contact with water and moisture, and don't operate the device or charger with a wet hand.
- To avoid failure of device, battery and charger, please protect the device, battery, and charger from violent shocks or shakes.
- To avoid failure of device, battery and charger, please protect the device, battery, and charger from overly hot or extremely cold circumstances.
- Never shake, throw, prod, drop, extrude, or bend the Bamboo D700 tablet.
- Never disassemble the device and accessories, otherwise repairs will not be covered by warranty.

1.3 Safety Instruction

Before the operation of the Bamboo D700, please read this chapter and instruct your kids accordingly. For further details, please refer to the safety instructions portion of this manual.

- Do not use the Bamboo D700 tablet when driving.
- In medical areas, please abide by prescribed rules and regulations.

- Please switch off the Bamboo when in (or near) medical facilities.
- To avoid interruption of wireless signals on planes, please switch off the Bamboo or change to airplane mode when boarding a flight.
 - To avoid electronic equipment failure, please switch off the Bamboo in the vicinity of high-accuracy electronic equipments with electromagnetic fields.
 - Do not disassemble the Bamboo and accessories. Only authorized agents are allowed to repair and service the Bamboo.
 - Please keep the Bamboo far away from magnetic equipments. These may erase the data stored in the magnetic equipments or on the Bamboo.
 - Do not use the Bamboo close to high temperature or inflammable gas.
 - Protect the Bamboo and accessories from little kids. Always ensure adequate supervision.
 - Please comply with relevant rules and regulations, and respect others' privacy and legal rights while using the Bamboo.
 - Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the Bamboo or PC.
 - Do not use the Bamboo in the bathroom or other humid environment, and ensure you protect the Bamboo from liquid-wash or wet substances.

1.4 Abbreviation/Terminology

ABBREVIATION/ TERMINOLOGY	FULL NAME	DESCRIPTION
MID	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Based on IEEE 802.11b standard wireless LAN
TF	TransFlash	Alternative name Micro-SD, super miniature memory card
HDMI	High Definition Multimedia Interface	High Definition Multimedia Interface

2 Bamboo Introduction

2.1 Bamboo Accessories Introduction

PACKAGE

Below are the items included in your Bamboo package. Kindly confirm you have:

- Bamboo D700 device
- Power adaptor
- USB cable
- User's manual

2.2 Bamboo Operation and Preparation

BATTERY CHARGING

We recommend you plug and fully charge the Bamboo on first use. Please use the provided AV adaptor to fully charge your Bamboo (at least 4 hours).

TO CHARGE:

1. Plug the the power adptor to the Bamboo and plug to power outlet.
2. Red LED light indicates it's being charged. When fully-charged, the LED light will turn to Green. Please wait until it is fully charged and don't pull out the adaptor while charging.

2.3 Bamboo Status and Reminder Icons

REMINDER ICONS

When a remind icon appears on your reminder window, please hold the column and slide downwards with your finger. Choose the menu you need, and confirm the information. You can then close the reminder window by clicking the column to slide up. Some of the more regular status icons include:



New email



Airplane Mode on



USB connected



USB adjustment connected



Return button



Downloading



Display recently-used application



Home button



Current power levels



WIFI connected, internet is available

REMINDER BOARD

Reminder icons will work while receiving emails or performing other functions. As stated above, you can open the reminder board to view the detailed information.

OPEN THE REMINDER BOARD

When the reminder column shows a new reminder icon, please hold the column and slide downwards with your finger, and then the reminder board is opened.

3 Quick Start Guide

3.1 Key Functions

KEY FUNCTION DESCRIPTION

Power button		Short press to sleep/wake up, long press to startup and shutdown
Volume + (up)		Increase the volume
Volume – (down)		Decrease the volume
Home button (home)		Click this icon in any interface and it will return to main interface
Back button (back)		Click this icon in any interface and it will return you to the previous menu
Menu button		This icon will be displayed whenever you are in the menu interface
Display recently-used application		Display recently browsed history

3.2 Startup and Shutdown

STARTUP

Press the **power** button for three seconds and the tablet will startup. By default the system enters into screen lock status. Press the **power** button lightly to unlock.

SHUTDOWN

1. Long press the **power** button and a pop-up shut-down window will appear.
2. Shut-down window contains mute mode, airplane mode and shutdown options.
3. Click **shutdown** (the last step item) to switch off your Bamboo.


3.3 Open and Close of the Screen

Screen will close on its own when not in operation after a certain period.

1. Screen will close on its own when not in operation for some time to save battery power.
2. When screen is open, press **power** key lightly and the screen will be closed immediately.

OPEN THE SCREEN WHEN IT IS CLOSED

If the screen is closed (in power-save mode), press the **power** button lightly to open the screen. The screen will open up and show a page similar to the picture below. Use your finger to slide to the right to unlock the screen or slide to the left to enter into the camera function.

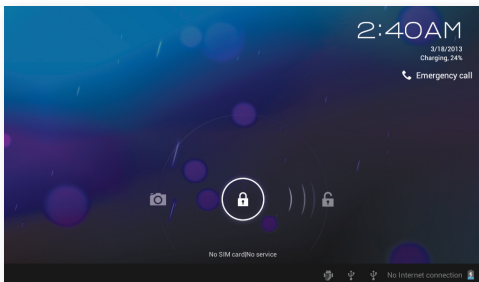

3.1

3.4 Use of Touch Screen


BAMBOO OPERATING METHODS

Highlighted below are the various methods to view the main screen, the menu and the applications on your Bamboo.

Click	When you want to use the on-screen touch keyboard for typing or to choose an application in the menu interface, all you need to do is touch the screen with your finger.
Press	If you want to open an item such as a link or textbox in a webpage, press the link with your finger.
Slide	Slide to the left, slide to the right, slide up or slide down. A vertical or horizontal movement with your finger on the touchscreen will move things around.
Press & Pull	Press your desired object on the touchscreen and pull together or pull apart to contract or expand objects. This feature is particularly useful when you want to zoom-in or zoom-out of images.
Rotate	The Bamboo comes with a 5- point multitouch screen option and you can rotate the Bamboo sideways to change the screen direction from horizontal to vertical or vice-versa. This function is especially useful when typing or when watching movies.

3.5 Home Page

The main interface looks like the image in picture 3.2 below. Press the blank spaces on the touch screen and a pop-up window will appear, giving you the option to set a wallpaper, or customize folders, widgets, and shortcuts.

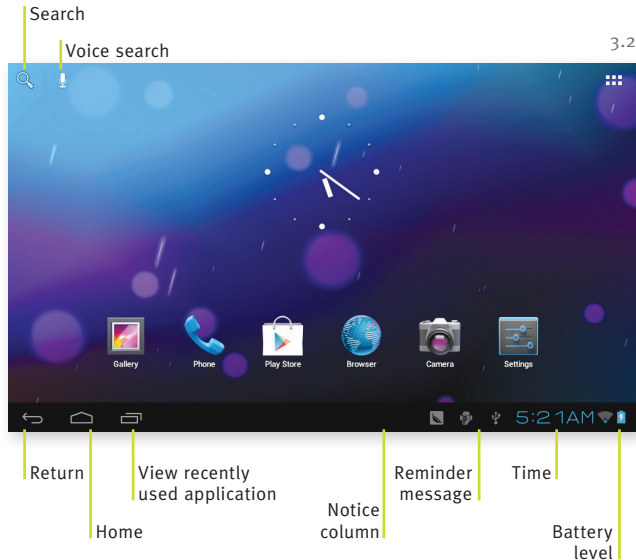


3.5 Home Page continued

THE EXTENDED HOME PAGE

The home page can be extended to several screens to provide more space or to provide customized landing pages where you can put new-added applications, shortcuts or widgets. For instance, you can create a home screen for yourself with your most used apps and create a homescreen for your child with apps that are child-friendly.

Click on the the blank space on home page and while your finger is still on the screen, slide right or left to get an extended home page as seen in image Picture 3.2.1 below.

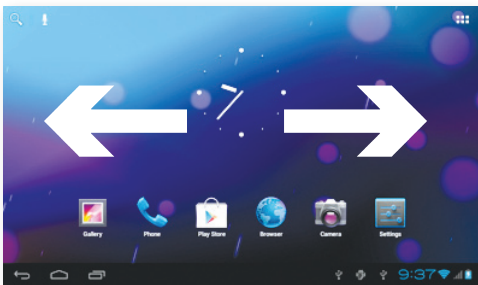

3.2.1


ICON MANAGEMENT IN BAMBOO SCREEN

In the older Android operating systems (below Android 2.3), you would have to create folders on your desktop computer, drop-in desired icons into the folder and transfer back to the tablet.


The Android 4.0 system makes the function of creating new folders much easier. To create a folder to manage your icons, see steps below:

1. Drag the icons you desire to group together on one icon (you can overlay several icons together) as seen in image 3.2.2 below.
2. Thereafter, click on the overlayed icons and the applications are displayed as a folder as seen in image 3.2.3.

Click on the unnamed folder (items in the darkened box) and a pop-up keyboard will give you the option to rename the folder. Note that the position of icons can be changed by a long press and by dragging the icons on the touchscreen.

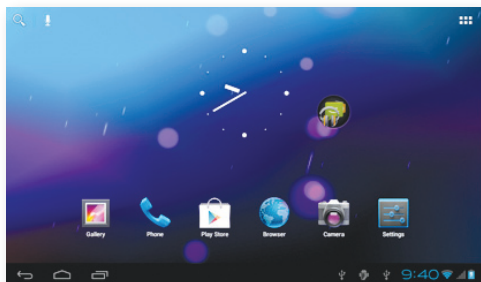

3.2.2

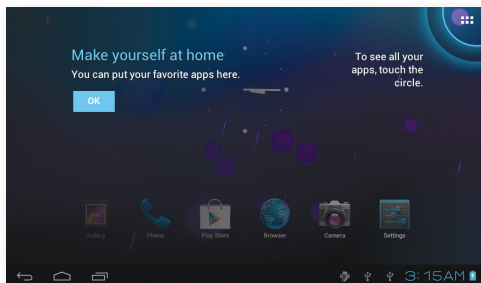

3.2.3

3.5 Home Page continued

REMOVE THE ICONS IN DESKTOP

1. A long press on the icons you desire remove, will reveal the icon (see right) on the top-right side of the screen.
2. Drag the icon to be deleted above the 'remove' icon. Once the icon turns red, remove your finger from the touchscreen to delete the icon.



CHANGE THE WALLPAPER OF THE SCREEN

1. On the home screen page, use your finger and press on any blank space in the main screen for a few seconds. A pop-up window will appear to change the wallpaper.
2. Click the gallery or wallpaper option to select the source of the desired wallpaper.

VOICE SEARCH

1. Touch the microphone icon.
2. Choose the search engine you would like to use. Google is the default search engine on the Bamboo.
3. On first use, set the desired language in voice search window, and click **confirm**.
4. Speak to the microphone with your search option and the browser will open the search result list.




Note: before voice searching, please make sure your internet is well connected.

3.6 Visit Application Procedures

As seen in Picture 3.3 below, enter into the main menu interface and choose from the various application procedures you would like to use.

3.3

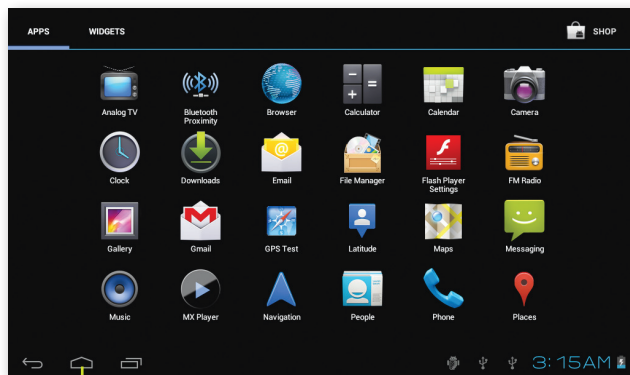


Return to homepage

3.7 USB Connection

BAMBOO STORAGE CONFIGURATION

Before transmitting documents, you have to conduct a storage configuration for your Bamboo:

1. Connect the Bamboo and computer via a USB cable. A reminder column and image will appear.
2. In the reminder board, click the **USB Connected** option, it will show an image as per Picture 3.4, then click **Turn on USB storage**.
3. Now the USB is connected successfully.

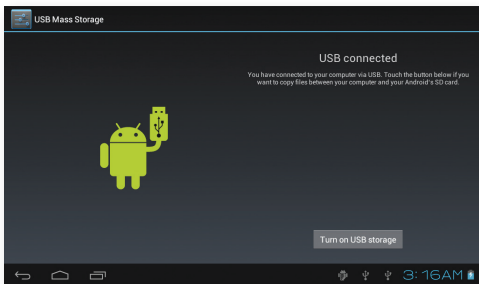

3.4

COPY DOCUMENTS TO MEMORY CARD

1. Connect the Bamboo to computer with USB cable.
2. **Turn on USB storage** to connect with your computer.
3. Open the **My computer** folder in your computer and check for items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click **Turn off USB storage** to uninstall.

Note:

1. When the Bamboo is connected with a USB cable and you open the USB storage configuration, you can't view items on the memory card through the Bamboo. It is only after you detach the USB cable that you can view items on your memory card.
2. Before copying, please confirm there is an SD card in the Bamboo and that items can be read.


3.8 Typing words

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type.

CHOOSE THE TYPING METHOD YOU WANT

1. Click on **Settings**.
2. Click **Language and Keyboard**.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

USE AND SWITCH OF INPUT METHOD

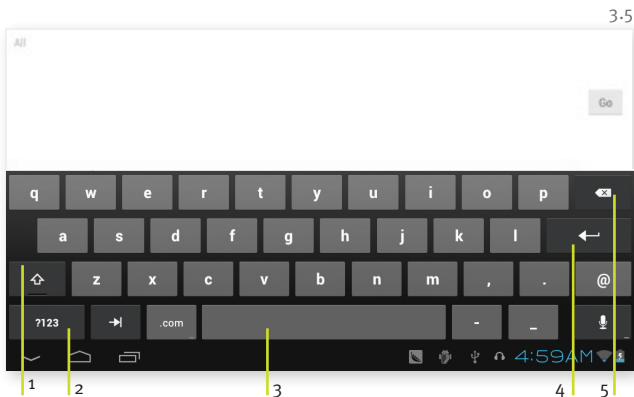

1. Switch between capital and small letters.
2. Switch input mode.
3. Click to insert the space.
4. Enter key to execute commands.
5. Delete the character in the left of cursor. click and hold to delete all the characters to the left of the cursor.

3.9 Operation technique

ENTER WIDGETS INTERFACE

In the application interface, click the widgets link at the top of the screen, or slide the screen. It will switch into widgets interface. Press the widget for a few seconds to create its shortcut, then you can enter into the application through the shortcut icon.

CREATE APPLICATION SHORTCUT ICONS IN THE DESKTOP

In the application interface or widgets interface, press any icon to switch into desktop automatically, drag and hold the icon, and you can move it to any position in the desktop.


Note: System will require you to make more choices and then you can activate this widget. If the target position has no space, the widget won't be added in the main screen.

4 Basic Settings

4.1 Wireless & Internet

CONNECT WI-FI

1. In the main menu or interface, choose **settings**.
2. Click **WLAN**, open **Wi-Fi**, and Bamboo will automatically search for the available Wifi wireless internet networks. See Picture 4.1
3. Choose the Wi-Fi internet you want to connect to. If it has password, a popup will appear in a password window. Enter the password, and click **connect**.

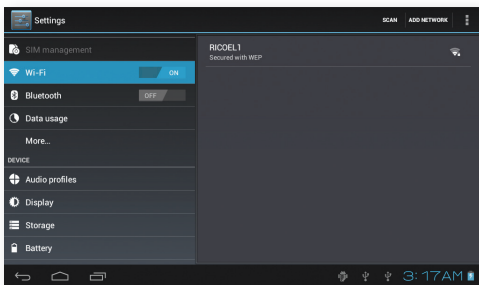


4.1

4.2 Bluetooth


BLUETOOTH FUNCTION

1. Click **settings** in main menu interface.
2. Click **bluetooth** and open it.
3. Click **search available devices** and the Bamboo will automatically search for nearby bluetooth devices. See Picture 4.2.

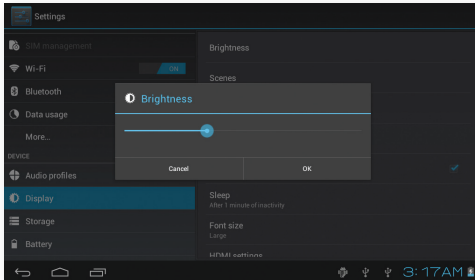

4.2

4. Click the available Bluetooth device and connect to it. Note that you may need to enter a password to connect the device.
5. After successfully connecting to a Bluetooth device, you have the option of renaming your device.

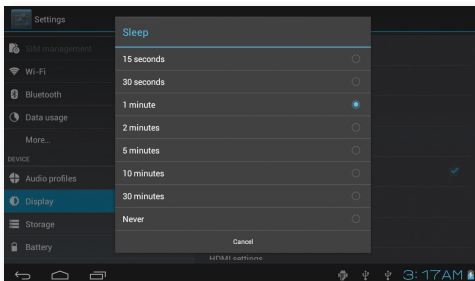


4.3

4.3 Display

ADJUST SCREEN BRIGHTNESS


1. Click **Settings**.
2. Click **Display**.
3. Choose **Brightness**.
4. When the brightness setting board pops up, drag the buttons to adjust the brightness.
5. Click **OK**.

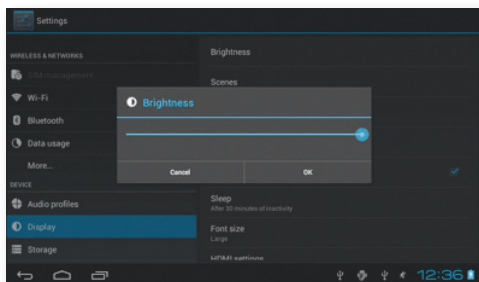

4.4

ADJUST THE SCREEN STANDBY TIME


1. Click **settings**.
2. Click **display**.
3. Click **sleep**.
4. Screen standby time setting pops up.
5. Select your desired standby time.

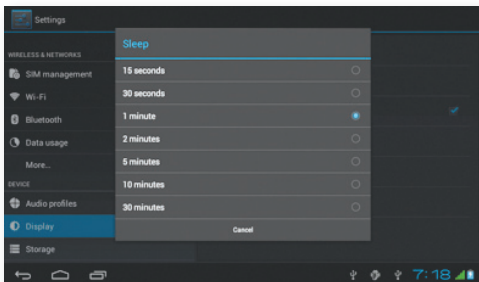

4.5

4.4 Management of Application Procedure

1. Choose **settings**.
2. Choose **apps**.
3. Thereafter you can manage or delete installed applications.

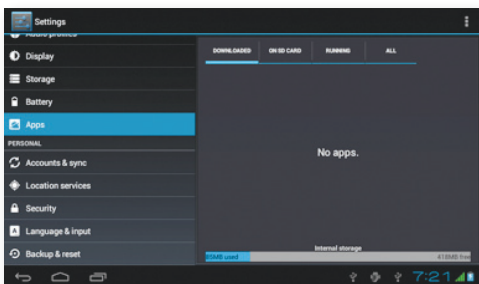

4.6

4.5 SD Card and Bamboo Storage


CHECK THE SD CARD AND INTERNAL AVAILABLE SPACE

1. Click **settings**.
2. Click **storage**.
3. Check the available space of SD card.
4. Check the internal storage space.

SAFELY REMOVE SD CARD

Safe removal of SD card can protect SD card and extend working life of the card.

1. Click **settings**.
2. Click **storage**.
3. Click **remove SD card**.
4. Now it is now safe to remove SD card.

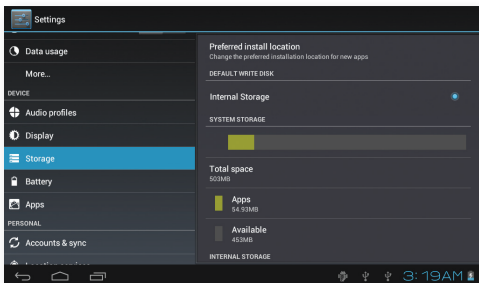

4.7


Note: removing SD card safely can protect and extend SD card lifetime.

4.6 Date and Time

By default, the Bamboo will voluntarily apply the date, zone, and time provided by internet.

TO SET THIS MANUALLY (SET DATE, TIME AND ZONE)

1. Click **settings**.
2. Slide down the screen, then click **date and time**.
3. Turn off “auto setting of date and time”.
4. Turn off “auto setting zone”.
5. Click **zone selecting** & choose the zone lists. Slide down the list to view more zones.
6. Click **date setting**, then click up or down button to adjust date, month, and year.
7. Click **setting** when you finish selection.
8. Click **time setting**, then click up or down button to adjust hour and minute.
9. Click **AM** or **PM** to change between morning or afternoon (this option is unavailable when you use 24-hour format).
10. Click **settings** to finish.
11. Click **24-hour format**, switch between 12-hour or 24-hour format. The time format you choose will be used on the alarm clock.
12. Click **date format** setting, then choose the time format you want to show on tablet.

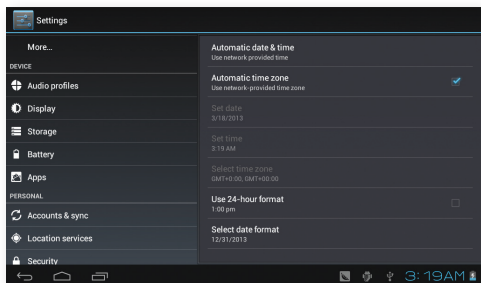

4.8

Note: If you use the default internet time option provided, you will not be able to set the date, time and time zone.

4.7 Language Setting

1. Click **settings**.
2. Click **language and keyboard**.
3. Click **language selection**, then choose the language you want, slide down to view more languages.

4.8 About Tablet

VIEW THE TABLET STATUS

1. Click **settings**.
2. Click **about tablet**, you can view the battery level, status messages and version number.

SYSTEM UPDATE

1. Click **settings**.
2. Click **about tablet**.
3. Click **system update**, update directed.

Note: Please make sure you have saved your previous information on the external memory before updating the system.


VIEW SYSTEM VERSION

1. Click **settings**.
2. Click **about tablet**.
3. You can view model number, battery levels and internal version.

4.9 Fixed-time Startup and Shutdown

1. Click **settings**.
2. Click **fixed-time startup and shutdown**.
3. Select **schedule power on/off**.

4.9

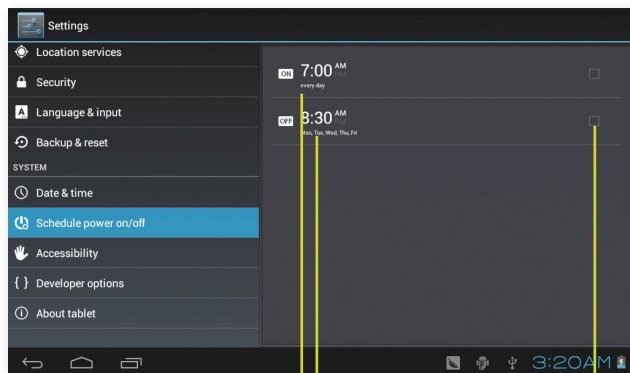

Click to enter
into fixed-time
startup setting

Click to enter
into fixed-time
shutdown setting

Open/close
fixed-time
shutdown

4.10 Safety Settings


SET LOCKED SCREEN

Lock the touch screen by using the lock icon or password if desired.

Note: You should enter the passcode after setting screen is locked.

SET UNLOCKED PICTURE

1. Click **settings**.
2. Click **safe**.
3. Click **lock the screen**.
4. Choose picture in text setting area.
5. Click **next**.
6. The unlocked pattern board will pop up. There are nine touch spots. Connect 4 points from vertical, horizontal or diagonal directions. As in Picture 4.10, remove your finger from the screen when you finish. The system will record your new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

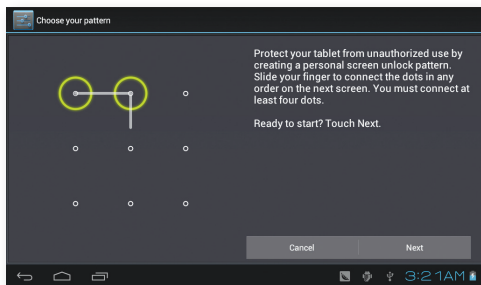

4.10

4.10 Safety settings continued

SET UNLOCK PIN CODE

1. Click **settings**.
2. Click **safe**.
3. Click **screen locked**.
4. Choose PIN in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

SET UNLOCK PASSWORD

1. Click **settings**.
2. Click **safe**.
3. Click **screen locked**.
4. Set password in text setting area.
5. Set new password(letters and numbers) and then click **continue**.
6. Enter the password again and then click **confirm**.


5 Multi-Media

5.1 Music




TO ENTER INTO THE MUSIC PLAYER:

1. In menu or desktop, click the music icon to enter into music player.
2. Click the songs you would like to listen to.

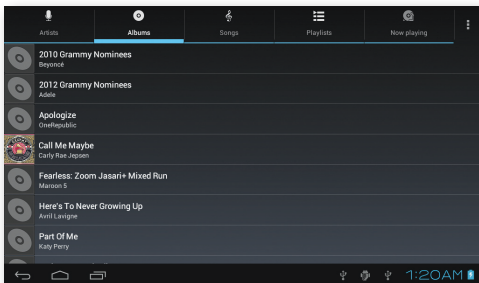

5.1

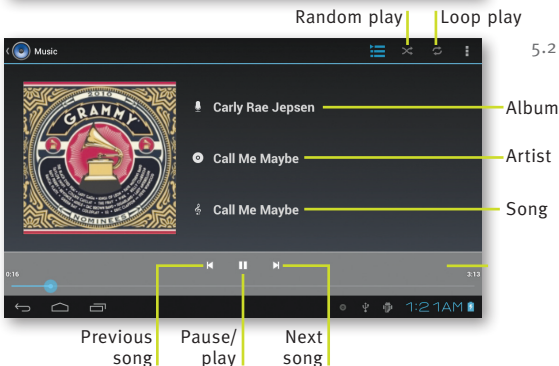

5.2


Drag the progress bar to adjust the play progress.

5.2 Video



To enter into video player:

1. Choose video icon in main menu.
2. Choose the video you want to play.

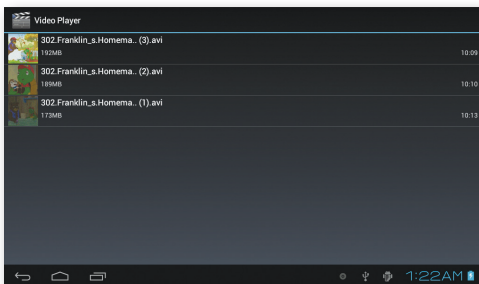

5.3



5.4

Adjust play
progress

Play/
pause

Choose the
screen mode

5.3 Photo Gallery

The Photo gallery application can automatically search for photos and video files in your SD card, and will classify these photos and videos into folders. You can use this application to view and edit photos, set the photos as wallpaper and watch videos.

VIEW PICTURES

1. Click gallery application.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will display it in full screen mode automatically.
4. You can zoom in and zoom out of pictures. Put two fingers on the screen, then separate the fingers (or gather join up the fingers and the picture will zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

EDIT AND SET PICTURES

When you check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and set pictures.

SLIDE SHOW

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click **slide show**, it will auto loop play (or choose  button in the picture folder).

CROP

1. Click **menu** key to display menu selection.
2. Then click **crop**, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjusting to the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.

5.3 Photo Gallery continued


EDIT

1. Click **menu** key, display the menu selection.
2. Click **edit**.
3. Adjust the brightness, style, color, etc.
4. Click **save**.
5. If you want to exit the edit option, click return key.

5.4 Camera

In the main interface or desktop, click camera icon to enter the camera menu.

- See operation of camera button in Picture 5.5
- Switch camera: choose Menu key, click switch front/back camera, as Picture 5.5

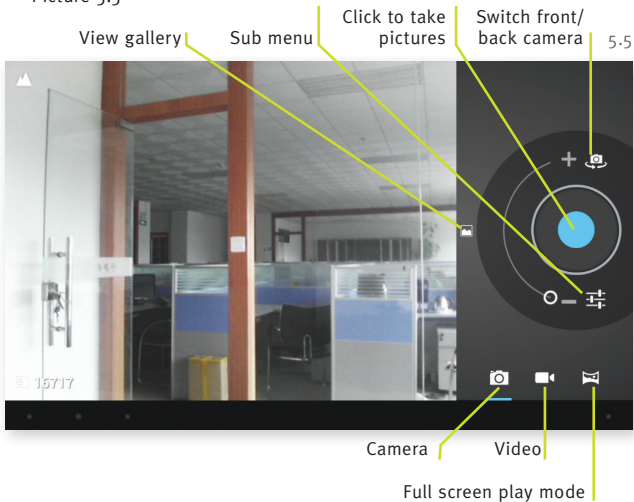

5.5 HDMI Connection


To use HDMI connection, set the HDMI output method; tablet connection and high definition TV. Play connected videos in full screen mode with HD resolution.

Note: High definition TV should be adjusted as HDMI output.

5.6 FM Radio




Click on the radio icon to enter FM radio interface, see Radio button operations on Picture 5.6:

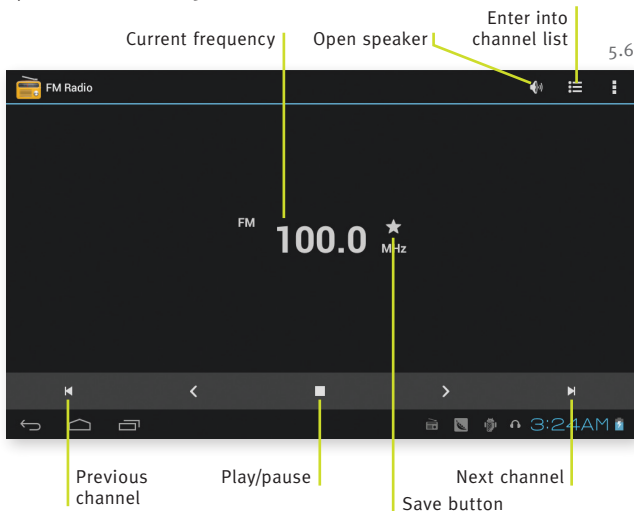

5.6 FM Radio continued

- RDS SETTING: click **menu** key in interface, click  button, enter into RDS setting as Picture 5.7, and make your desired selection.

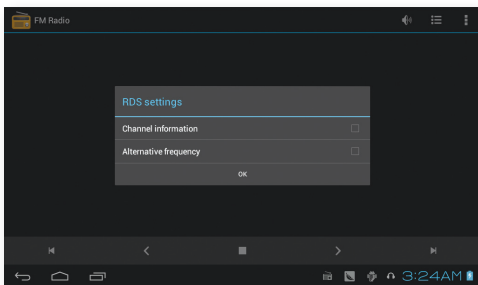


5.7

- SEARCH CHANNEL: Click **menu** in the main interface, click search button, it will start to auto search channels, the searched channels will be saved in the channels list.
- SAVE CHANNELS: Click  button in the main interface to save the channel, and the channel will be saved in channels list.


5.7 Analog TV

1. Click **analog TV** application in main menu interface to enter into mobile TV, as in Picture 5.8 below.

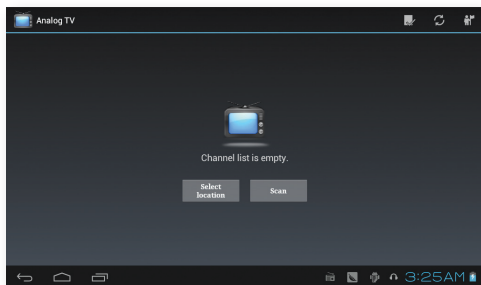

5.8


2. **Select location**, as Picture 5.9 below. If you cannot find your country, use United Kingdom as default.

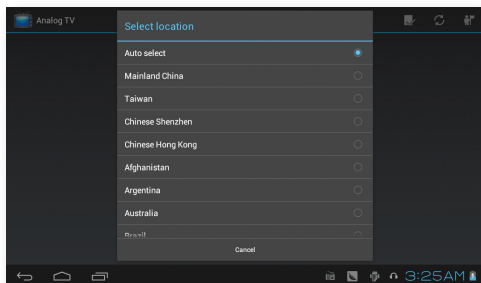


5.9

5.7 Analog TV continued

3. Search programs, as Picture 5.10-5.11

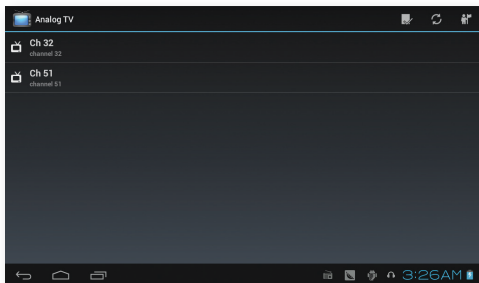


5.10

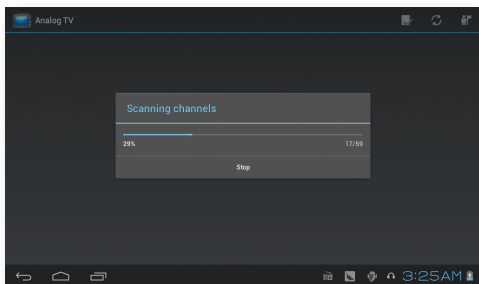

5.11

4. Select **channel**, enter into play interface, as Picture 5.12

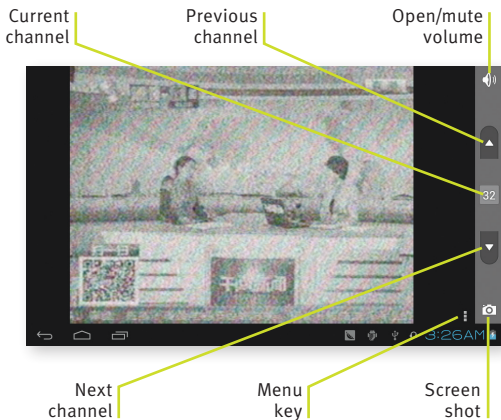

5. Click **menu** button, more function, as Picture 5.13




6 Communication Function

6.1 Phone

1. Click **phone** application procedure.
2. Operate as in Picture 6.1

Call history Contact list

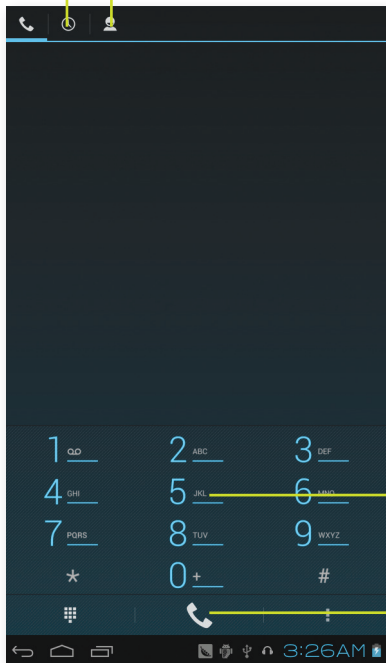


6.1

The area
of dial
phone


Dial
phone
numbers

6.2 Text Message

1. Enter into main menu, choose  application icon.

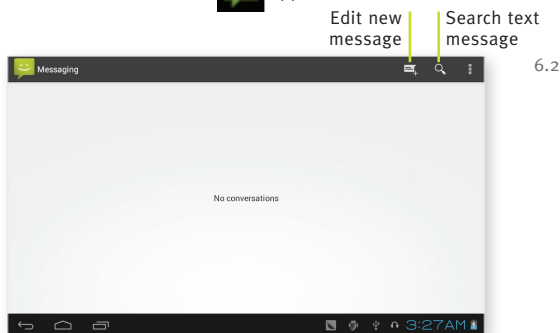

2. Click **edit new message**.

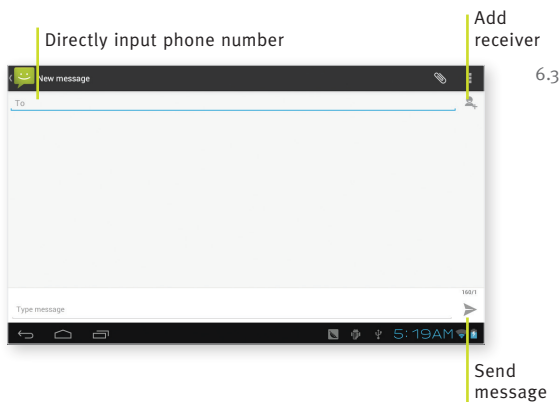

6.3 Contact List

Click contact list  in the main interface, enter into the contact list as in Picture 6.4




6.4

- SEARCH CONTACT: click  button, enter into search function.
- ADD CONTACT: click  button, enter into add contact interface.

7 Internet

7.1 Browser


Where you are connected to a Wi-Fi or mobile internet network (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser in the main menu or desktop to enter the browser interface, as in Picture 7.1

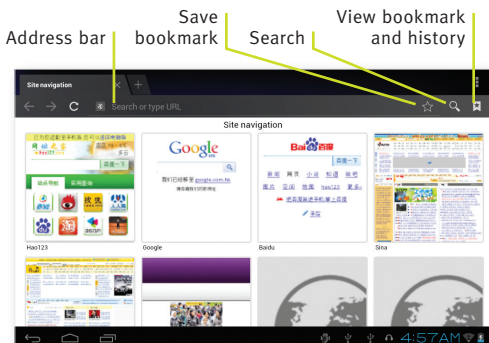

7.1

7.1 Browser continued


Click the address bar to enter the desired website. Click **start**, enter into related webpage, then you can browse the website information, as in Picture 7.2

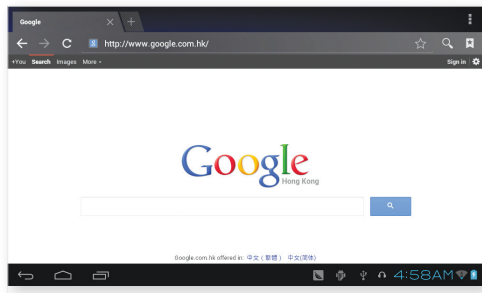

7.2

7.2 Email

Email application procedure contains the email setting guide. You can add external POP3 OR IMAP email accounts of other web email service providers (For instance, Webmail, Yahoo, Gmail, Hotmail etc). See diagram below.

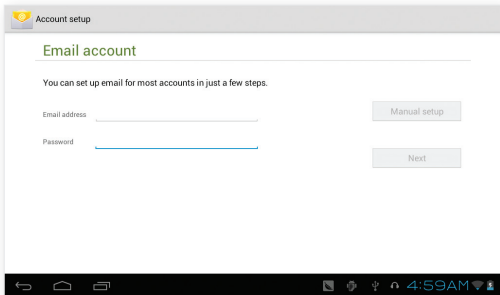

7-3

A. EMAIL SETTING

1. After you click the email icon  you will see the email setting guide, which will guide you.
2. Enter your email address and password.
3. Click **next step** button, choose your email type (POP3 or IMAP).
4. Click **next step** button to test whether the email service provider can receive or send emails.
5. Enter the email account and click **finish**.
6. If the email account is available, it will take you to your mail box automatically.

B. DELETE THE EMAIL ACCOUNT

You can delete previously set POP3 or IMAP email accounts.


7.2 Email continued

Click 

1. Enter into your mail account.
2. Press **menu** key.
3. Click **account**.
4. Press the account you want to delete.
5. Click **confirm** to remove.

C. SEND E-MAIL

1. Click  to display your mail box.
2. Click the inbox and it will refresh all new emails automatically.
3. Click each message to read new email.
4. Press **menu** key. Menu will pop-up.
5. Click **edit**  icon to enter into new email editing interface.
6. Input the receiver's email address.
7. Enter the subject and email content.
8. If you want to add attachment, click **menu** key, the menu will pop up.
9. Click **add attachment** (pictures, video).
10. Click **send** to send the email out.

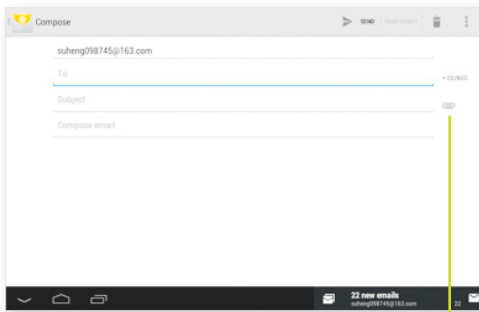

7.4

Add attachment

8 GPS Function

8.1 GPS Navigation

1. Map of the third parties is required for tablet's internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, and meet the needs of outdoor navigation.
2. Enter into setting interface, click  icon, enter into below picture 8.1



8.1

Note: When positioning successfully, the blue parts will turn to green color, and it shows the latitude, longitude, height, speed, and the time of your location. As Picture 8.2

8.1 GPS Navigation continued




Note: The value indicates the signal strength, the positioning time is relevant to time zone in your setting, if the time is not inconsistent with real time in your location, please check if the time zone in your setting is correct or not.

9 Other Application Procedures

9.1 Clock

Click **clock** application and enter into interface as seen below.

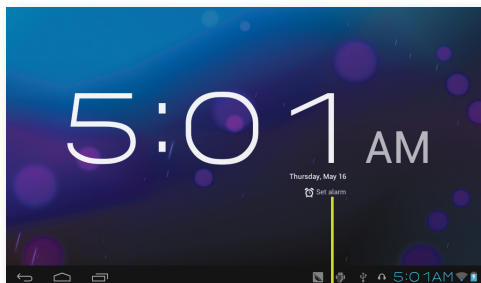


9.1

Set alarm

9.2 Calculator

1. Click 
2. Enter into the basic board of the calculator.
3. Touch the numbers in calculator mode to calculate.

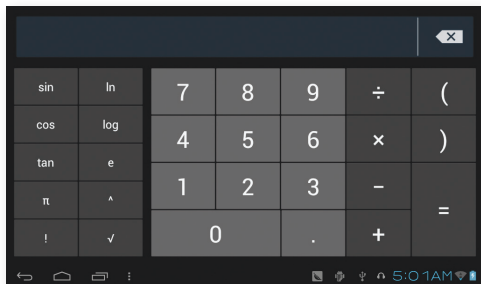


9.2

9.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the external memory card. It will also share the files, install apps etc.


In the main menu or desktop, click the document manager icon  to enter into documents manager.

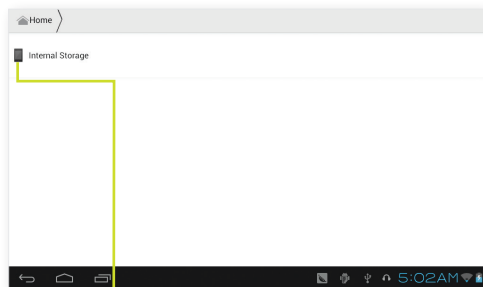

9.3


Internal storage

- A. To copy, cut, delete, rename the files and folder: Choose the file or folder, press the file or folder to enter into the interface in diagram below.

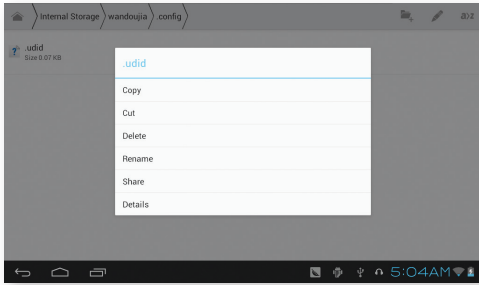

9.4

- B. Choose any file and press it. A pop up will appear with share options on how you want to send the file. See screen shot below:

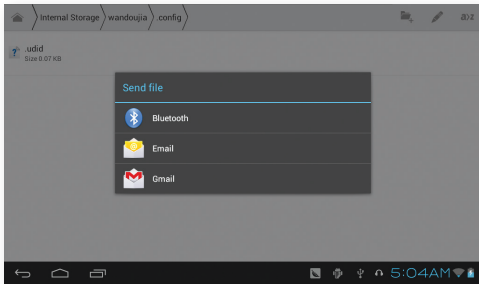

9.5

- C. Install Apk file: Choose the file suffixed with “.apk” in the file manager, you can now install the third part software.
D. Add new folder: Choose the menu you want to add the file to, click **menu** key, choose **new folder**.

9.4 Recorder


In the main interface or desktop, click recorder icon  to enter into record interface.

Click record key  to start a recording.

Click Stop key  to stop recording.

Click Play key  to play the recorded sound. Note that you will be required to choose if you would like to use or abandon the recording.

Play the record: Choose the video player to play the recorded sound. Choose the recorded sound in the source manager, and click on it to play.

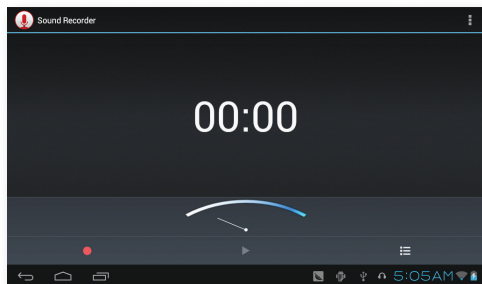

9.6

10 Installation of Applications

10.1 Installation

INSTALL THE THIRD PARTY APPLICATION PROCEDURE

You can obtain third party applications from the Google Play Store or the internet, and install it yourself on the tablet. Copy the application into an SD card, and insert in the tablet.

1. Click **file manager** and choose the application you would like to install.
2. Press on the application you want to install.
3. On pop-up window, click **install apk**.
4. Finish the installation and enter to operate.

Note: The third party apps used on the system are all suffixed with .apk.

10.2 Uninstall

UNINSTALL APPLICATION

1. Click **settings**.
2. Click **manage applications**.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Note: The procedure manager installed by system has many convenient methods to uninstall, after opening procedure manager, click uninstall, it will list all the applications installed on the tablet.

10.3 Update Path

UPDATE THE APPLICATION

1. Download the latest application version.
2. You will be asked if you want to replace the old version with the newer version. Select your desired option.

11 System Upgrade

11.1 Preparation for System upgrade

DOWNLOAD THE UPGRADE PROCEDURE

You can download the software upgrade pack from website, then use the upgrade pack to upgrade the system version of tablet.

PREAPRATION FOR SYSTEM UPGRADE:

1. Download the system upgrade pack to your computer from related website.
2. Ensure you back up useful data in the external memory.

11.2 Restore Factory Setting

If you tablet encounters a software issue or where unlock passwords are forgotten, you can use the 'restore factory setting' to return to factory status. Restoring the factory setting will delete all data such as existing applications and user's customized settings. Do remember to backup your data.

1. When the device is in shutdown state, press the **volume-up** key and **power** key simultaneously.
2. A screen page with a triangle and exclamation mark will appear.(As Picture 11-1)
3. Click **power** key when you see the triangle.
4. The system enter into another picture, recovery status, there are eight options (As in Picture 11-2)
5. The first option: Restart the system. The second option: System upgrade from SD2. The third option: System upgrade from external SD card. The forth option: Wipe caching data. The sixth option: Wipe data/ factory reset. The seventh option: Backup user's data. The eighth option: Recover user's data.
6. Use the volume key to move up and down. Press **menu** key to execute.
7. Choose wipe data/factory reset to execute.
8. Enter into confirmation interface, click **yes** to restore factory setting, click **no** to exit the confirmation interface.


11.3 System Upgrade

Note: Before upgrading, please confirm the battery level of your tablet. You must have more than 30% battery charge to execute an upgrade or factory settings restoration. Also ensure you backup your important data, such as application procedures, emails, etc.

UPGRADE STEPS:

Insert the SD card with update zip package into device or put this package in the root directory of the device.)

1. Click **volume up** key, then press **power** key to enter into recovery mode, as Picture 11.1:

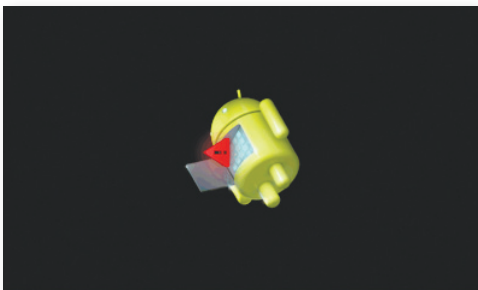


11.1

11.3 System Upgrade continued

2. Click **power** key to enter into main menu interface, as Picture 11.2
3. Move the cursor with volume down key, choose **apply update from SD card**, as Picture 11.3


11.2

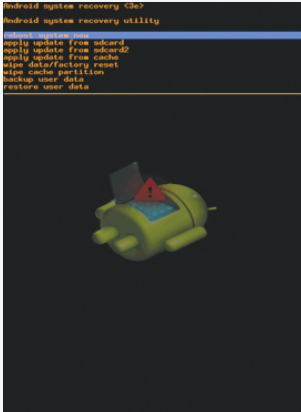

11.3



4. Click **volume up** key enter into this menu, click **update.zip**, as Picture 11.4

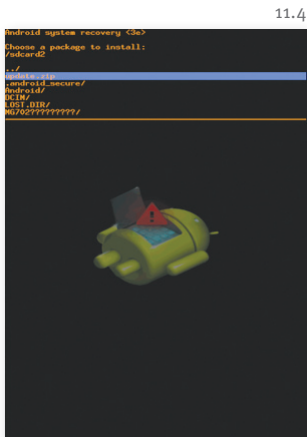

5. Click **volume up** key to upgrade, as Picture 11.5



11.3 System Upgrade continued

6. When the upgrade is finished, it will return to the main interface automatically, as Picture 11.6.

11.6



7. Short press **volume up** key to exit upgrade mode, MID will enter into restart the system automatically.

12 Trouble-Shooting

1. THE FIRST STARTUP OF DEVICE IS SLOW

After the device has been upgraded, the first startup will need to re-install the pre-installed applications. It usually requires 2-3 minutes. The startup afterwards will be much quicker.

2. DEVICE CAN'T CONNECT WI-FI

- Make sure the wireless router of internet service works normally.
- Ensure the device and wireless router within the required distance. Ensure there are no barriers (eg no wall) between router and device.
- Ensure the user name and password are both correct.

3. DEVICE FEELS HOT

When many application procedures are running and the screen is set to very bright mode or even when charging, device may feel warm. This is normal.

4. EMAIL CAN'T BE SENT

- Ensure your internet is well connected.
- Make sure your email settings are correct.
- Keep your system time and local time consistent.

5. THE SYSTEM IS BEHAVING ERRATICALLY

When you install some third party application procedure, it may cause abnormal device behaviour. Press the **reset** key (next to power port) to reset the system.

6. THE WEBPAGE CAN'T BE OPENED

- Please ensure you are within the required distance between router and device.
- Ensure you are receiving data from your internet service provider
- Please restart WIFI and try again.

7. DEVICE IS SLOWER THAN NORMAL

Please turn off any applications you don't need in advanced task management, or uninstall some third party application to release more system resources.

Appendix

ITEMS	DETAILS	DESCRIPTION
Basic Parameters	Device Model No.	D700
	CPU	MediaTek 8377
	CPU Frequency	1GHz
	DDR-RAM	1G
	NAND FLASH	16G
	Operation System	Android 4.0
	Internet Mode	GSM
	Data Service	GPRS/EDGE
	MH z	2G GSM900/1800; 3G WCDMA850/1900/2100
	Camera	Built-in double camera, primary camera is 2Mega, secondary camera is 0.3Mega.
	USB port	MINI
	Battery	3100mAh
	AC adaptor	Input voltage DC 5V,current 2A
Basic Functions	Memory card	Micro SD card, Maximum storage 32G
	Main screen	7.0 inch Hi-fi TFT display screen, with resolution of 1024*600
	GPS Navigation	Built-in GPS satellite signal receiver can search the fixed position accurately.
	GSM Communication	Built-in 2G,3G modules, you can achieve wireless communication function through SIM card.

ITEMS	DETAILS	DESCRIPTION
Basic Functions (continued)	Bluetooth	Built-in Bluetooth module Support FTP file delivery, you can share various fascinating documents in vicinity.
	G-sensor	Switch from crosswise and erect screen freely and support all kinds of gravity-reacted games, which can experience real game enjoyments.
	FM transmission/receiver	Unique FM transmitter function. The product can transmit navigation voice to FM receiving device through FM, and then play by car speaker; you can enjoy perfect acoustic fun. FM can bring many channels for your option.
	Mobile TV	Built-in TV module, receive Analog TV signal.
Application procedure	Video play	Support 3GP, MP4 format, with maximum resolution of 720*576
	Music play	Built-in music player, support MP3/AAC/AMR/WAV format.
	Games	Support installation of Android third party games.
	Input method	Android keyboard, Google Pinyin input method.
	Picture view	Support JPG BMP PNG GIF format pictures view.
	OFFICE software	Support office (word excel read and edit), support PDF viewer.

Contact

FOR ENQUIRIES ABOUT YOUR TABLET:
support@bamboo.com.ng

www.bamboo.com.ng



facebook.com/bambootab



[@bambootablet](https://twitter.com/bambootablet)



youtube.com/bambootab

